 
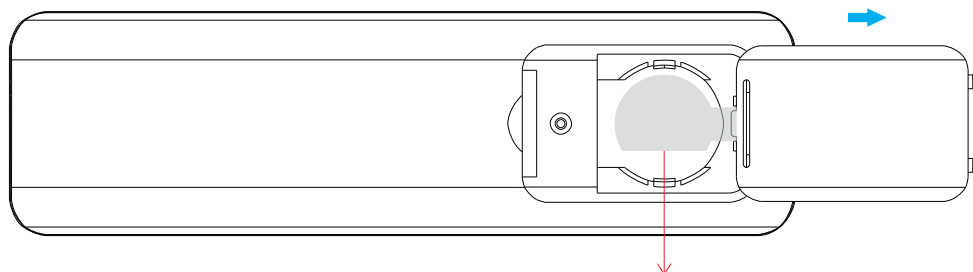 


Important: Read All Instructions Prior to Installation

Function introduction

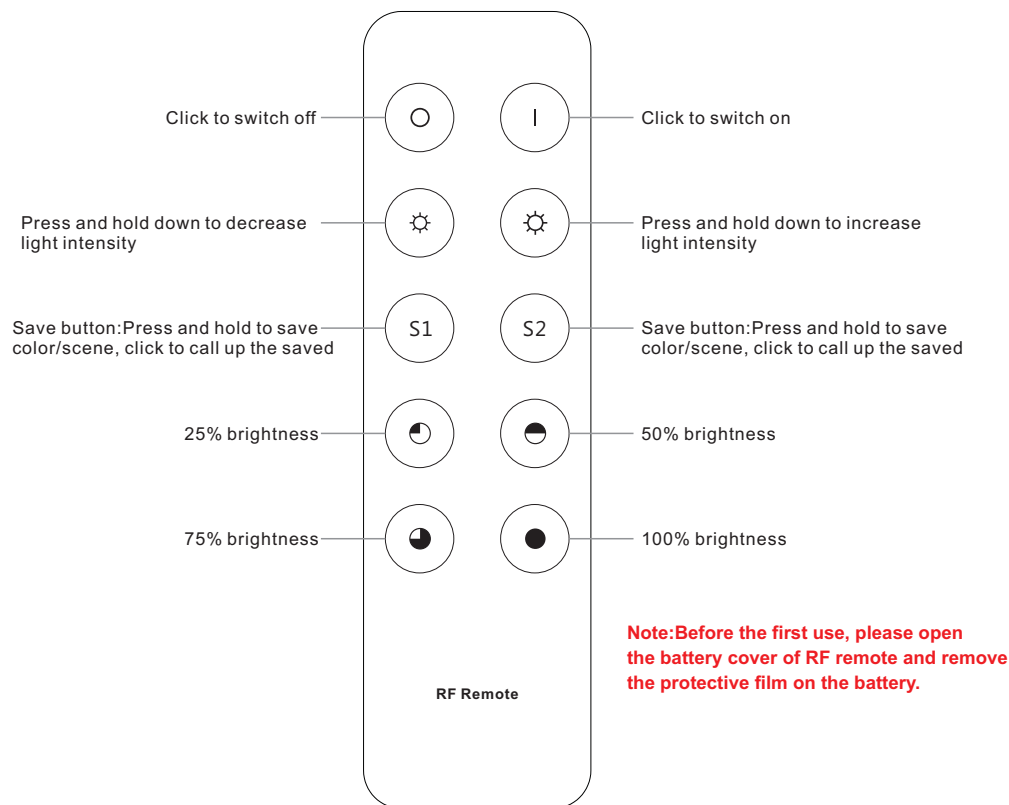


Note: Before the first use, please remove the protective film on the battery.


Product Data

Output	RF signal
Operation Frequency	869.5/916.5/434MHz
Power Supply	3V(1xCR2025 battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	136.3x38.9x10.7mm

 Pair with RF receiver

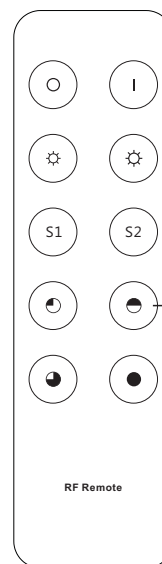

 Step 1: Do wiring the RF receiver according to wiring diagram

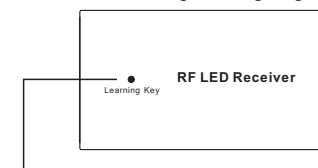

Step 2: Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status

 
Step 3: Click any button of the remote (e.g. button G), LED lights connected with the RF receiver flicker once means the receiver is paired with the remote successfully.

Note: one receiver can be paired with max 8 remote controls.

Delete the pairing:

- (1) Wire up the RF receiver correctly, power on.
- (2) Press and hold down the "Learning Key" button on receiver for over 3 seconds until the connected light flashes, which means well deleted.

Product Dimension

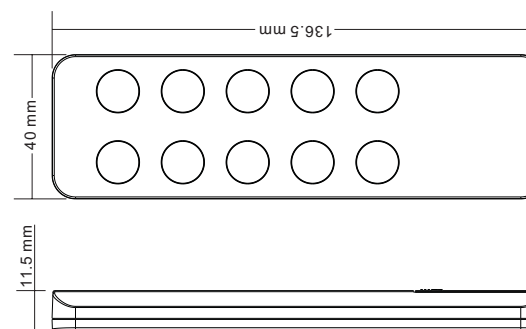

UNI-BRIGHT nv – Belcrownlaan 13Q - 2100 Antwerpen, Belgium
Tel : +32 3 641 61 40 email: info@unibright.be

www.unibright.be

VERSION 1 - 01/14