




- Match all DALI system in the market
- Manual /automatically DALI address setting
- DALI address digital indicate
- Four channels with four different addresses,4 channels work separately
- The version is V1.0.
- LED Failure Report Function.


Parameter

Part No.	Input Voltage	Output Current	Output Power	Remarks
DAREC-DIN	12-36VDC	4x5A	4x(60-180)W	Constant voltage

Product Size

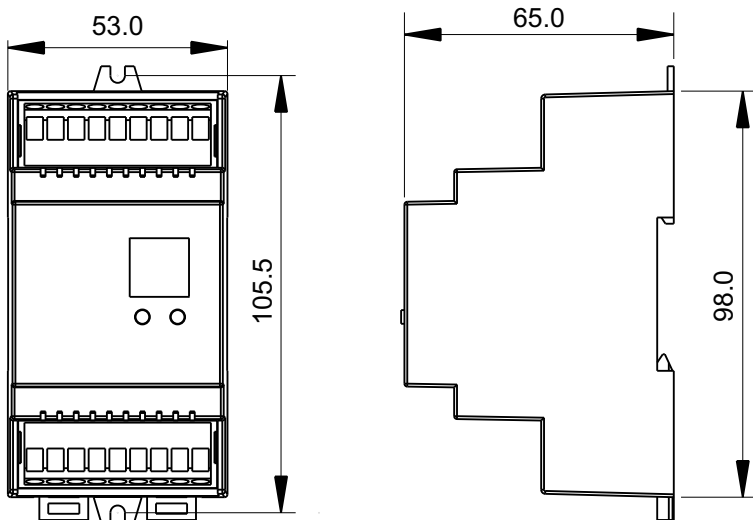

Wiring diagram

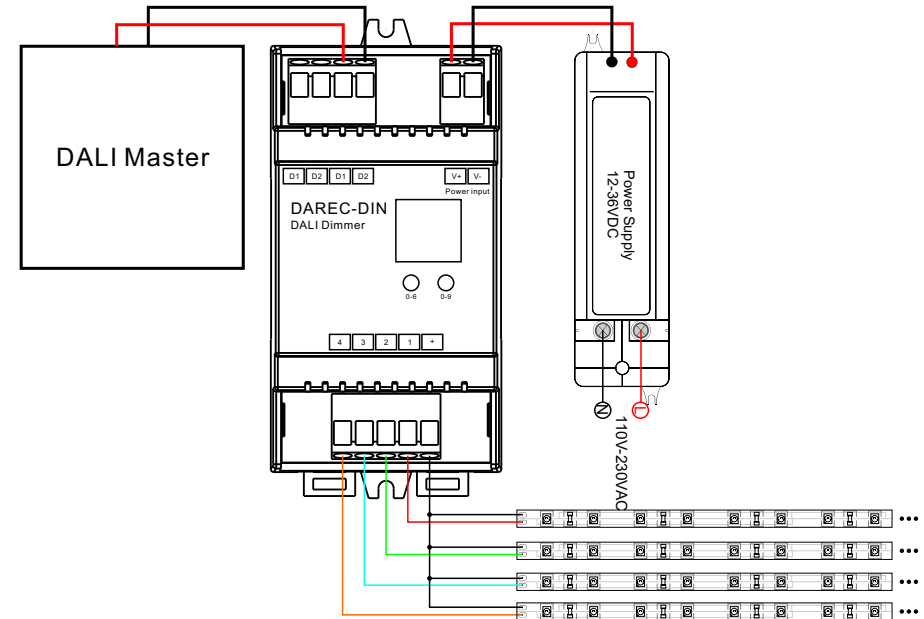

Operation

Setting DALI address

a. Manual: Long press any one button---digital address will flicker---short press button to set address we want---long press any button to confirm.



b. Long press two button together we can change the address from 1A to 4A of the four channels
For example, when we set address to 22
When select 1A, all four channels will be same address 22.
When select 2A, channel one and channel three will same address 22, channel two and channel four will be 23.
When select 3A, channel 1,2,3 will be address 22, 23, 24, and channel 4 address is also 24
When select 4A, channel 1, 2, 3,4 will be address 22,23,24,25.

c. DALI master setting: DAREC-DIN can also be setting address by all DALI masters which possesses this function. The specific operation can refer to DALI master manual.

Safety & Warnings

- 1) The product shall be installed and serviced by a qualified person.
- 2) IP20. Please avoid the sun and rain. When installed outdoors, please ensure it is mounted in a water proof enclosure.
- 3) Always be sure to mount this unit in an area with proper ventilation to avoid overheating.
- 4) Please check if the output voltage of any LED power supplies used comply with the working voltage of the product.
- 5) Never connect any cables while power is on and always assure correct connections to avoid short circuits before switching on.
- 6) Please ensure that the cable is secured tightly in the connector
- 7) For update information please consult your supplier.